



 
## ▼ Package Content




Camera



Quick Start



Screws & wall plugs

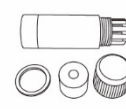


Waterproof plug kit



Star key wrench


Step1: Find the star key wrench supplied in the sales package to open the dome cover.

Step2: Locate where to install this camera and fasten the camera to the ceiling or wall.

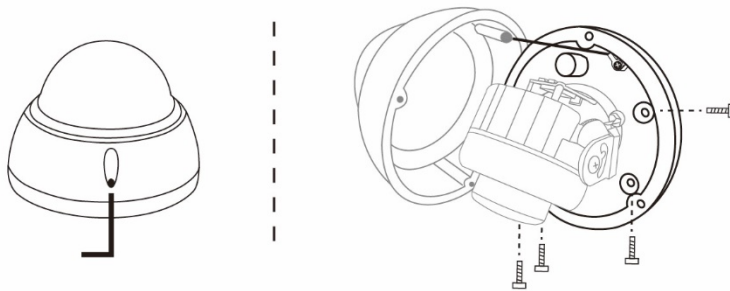

Step3: Loosen the screws as indicated below (if necessary) to adjust the viewing angle of the camera and fasten the screw to secure the angle.

Step4: (Available only when supported) Find the microSD card slot on the camera module as indicated below and insert a microSD card.

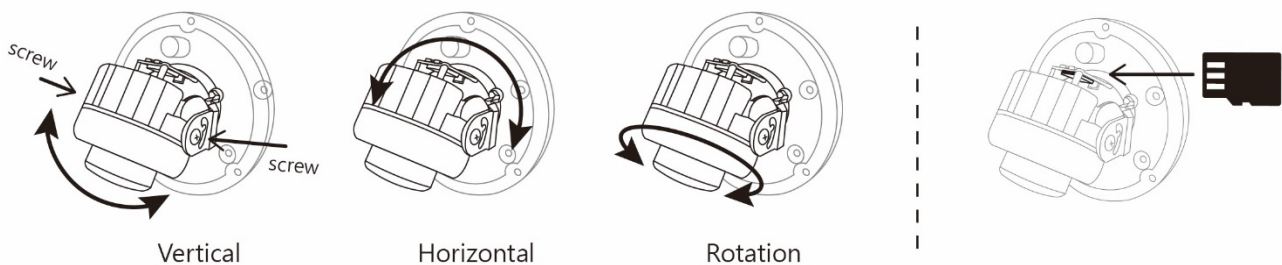

Step5: Replace the dome cover back. Make sure the rubber ring is well attached and fastened to ensure the water-proof function works normally.




## ▼ Package Content



 
Camera



Quick Start



Screws &  
wall plugs

 


Waterproof  
plug kit




Hex wrench

Step1: Find the hex wrench supplied in the sales package to open the dome cover.


Step2: Locate where to install this camera and fasten the camera to the ceiling or wall.

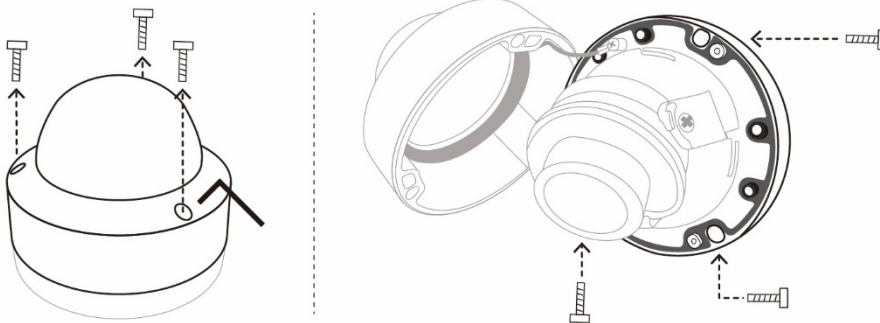


Step3: Adjust the viewing angle of the camera as shown below.

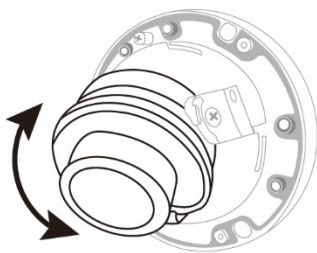

Vertical

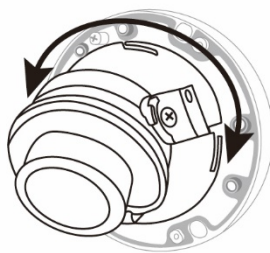

Horizontal

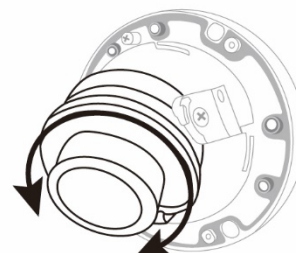

Rotation

Step4: Replace the dome cover back. Make sure the rubber ring is well attached and fastened to ensure the water-proof function works normally.