



# Installation Guide E-20070

①

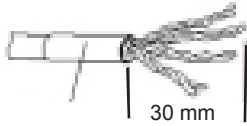


Strip cable approx. 30 mm then place the braid back.  
Remove the Aluminium foil of the pair shielding.  
Lay the included copper foil over the braid with the glued side inside. The overlength ending of the braid can now be removed.

②

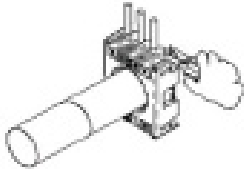


Insert the cable wires in the cable-divider and all 4 pairs need to be lead through. All colour-coded single wires conform to the TIA/EIA 568 A or B and should be lay in the slots. Please be sure, that you placed the right wire in the right slot acc. to colour code. Cut the ending of the overlength wire.

③

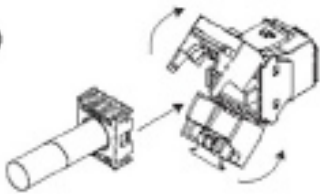


Set the cable-divider in the housing.  
In this process the wires will be lead in the suitable slots.


④

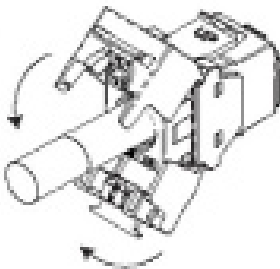

The hinged part of the housing with an suitable crimping tool pressing until its really snapped into place.

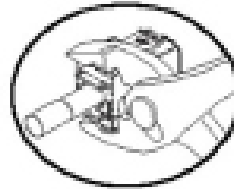

⑤

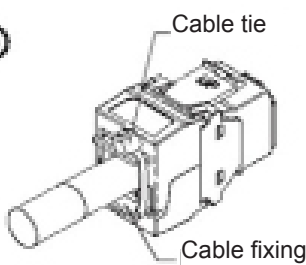

Cable fixing via cable ties.

Mounting is now finished.

## Information:

Colour coding of the wiring pairs are conform to the Standards TIA/EIA 568 A respectively TIA/EIA 568 B.

| T586A | T568B | Aderfarbe / Colour-code    | Paar / Pair |
|-------|-------|----------------------------|-------------|
| 1     | 3     | weiß-grün / white-green    | 3           |
| 2     | 6     | grün / green               |             |
| 7     | 7     | weiß-braun / white-brown   | 4           |
| 8     | 8     | braun / brown              |             |
| 3     | 1     | weiß-orange / white-orange | 2           |
| 6     | 2     | orange / orange            |             |
| 4     | 4     | blau / blue                | 1           |
| 5     | 5     | weiß-blau / white-blue     |             |